



## EASY START GUIDE

# DUCTED CAMPING HEATER

Model No. CH100



Your Gasmate Ducted Heater has been designed to operate effectively and efficiently and meets the Operational and Safety Function requirements of the Australian Standards.

### FEATURES:

- Portable & easy to use
- Simple 2 step operation
- Flexible Ducting - maximum length 1500mm
- Full safety system ODS / Flame Failure Device and Tilt Switch
- Rechargeable In-built Battery
- Electronic Ignition
- Uses Disposable Propane Cartridges
- Onboard storage for Duct / Regulator / AC Charger

### IMPORTANT! OUTLET TEMPERATURE

Maximum air temperature achieved from the appliance is +58 Degrees +/- 2 degrees with an ambient temperature up to +15 degrees. This temperature is measured at the outlet of the heater and not at the end of the flexible ducting tube.

Heated air will start to flow from the ducting within the 2 to 3 minutes of operation

Once the maximum outlet temperature is reached the burner will extinguish and the fan will continue to function, the unit must then be allowed to stabilise before being restarted for further operation.

### SPECIFICATIONS

- Run time using Disposable Propane Cartridge: 7-8Hrs
- Run time of battery: 6-7Hrs
- Recharge time of battery: 5-6Hrs (240VAC Adapter)
- Maximum Temperature: +58 degrees +/-2 (Measured at outlet) @ +15 degrees ambient

### OPERATION

- Locate the appliance in a safe position and remove the Duct and Regulator from the onboard storage.
- Extend and connect the ducting to the heating outlet, ensuring that the micro-switch at the neck of the heating outlet is fully engaged
- Attach the regulator and gas cartridge
- Switch the unit on and press the ignition button, the pilot light can be viewed through the "Pilot Viewing Window"
- The burner will then ignite, allow 2 to 3 minutes for warm air to flow from the ducting.

### FOR YOUR SAFETY

If you smell gas:

1. Shut off the gas to the appliance.
  2. Extinguish any open flame.
  3. If odour continues, immediately call your gas supplier.
- Do not store or use gasoline or other flammable vapour and liquids in the vicinity of this or any other appliance

### WARNING

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.

Read the instructions thoroughly before installing or servicing this equipment.

### FOR OUTDOOR USE ONLY PROPANE GAS

Please refer to Owner's Manual and Gasmate website for further product and operational information

**Important: Retain this supplementary instruction for future use**  
**Caution: Only use the battery charging cable supplied with the heater**