



ASSEMBLY INSTRUCTIONS:

5. **Hang the end panel:** remove the remaining adhesive film from the hanging blocks and bottom spacers. Align the end panel frame with the BBQ end module and carefully hang it onto the blocks. Be cautious during alignment, as the adhesive on the blocks will make repositioning difficult once they touch the panel.

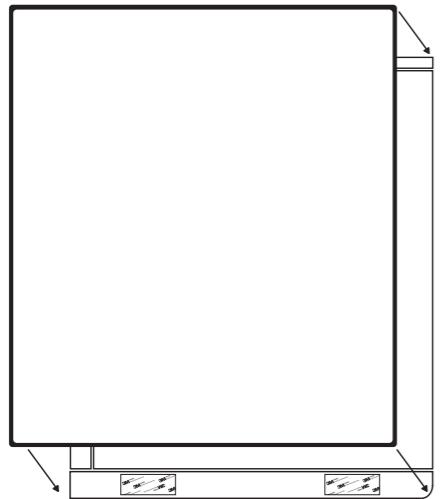

6. **Secure the panel:** press the end panel frame firmly against the cabinet or fridge module, especially where the adhesive blocks are located. Use masking tape to secure the End Panel for 24 hours.

Allow adhesion time: Let the adhesive set for 24 hours for optimal strength before removing the tapes.

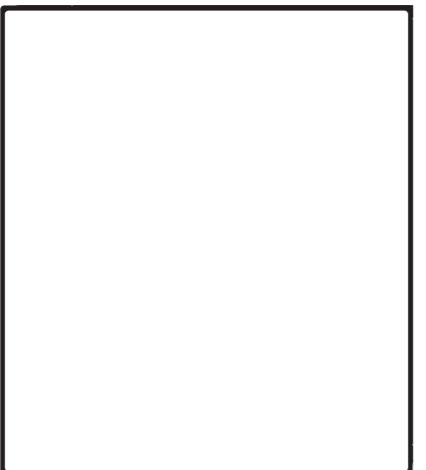

Gasmate®

OUTDOOR KITCHEN COMPACT LAMINATE END PANELS

SUITABLE FOR GALAXY & NOVA SERIES*

Model No. BA3514



FOR ANY QUERIES OR ASSISTANCE CALL

AUSTRALIA  Customer Service (Australia only)	NEW ZEALAND  Customer Service (New Zealand only)
---	---

1300 174 876
Hours of operation:
Monday to Friday 8am - 5pm EST
Email: sales@sitro.com.au

For warranty keep your purchase receipt,
this will be required to make any claims under
the 3 year warranty.

0800 161 161
Hours of operation:
Monday to Friday 8am - 5pm
Email: sales@aber.co.nz

For warranty details visit gasmate.co.nz.
Keep your purchase receipt, this will be required to
make any claims under the 3 year warranty.


*Suitable to be attached to all Galaxy, Galaxy Gen2 and Nova series modules.
(Not suitable to be attached directly to Galaxy, Galaxy Gen2 and Nova series BBQs).

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

Gasmate® is a registered trademark of Sitro Group Australia Pty Ltd
www.gasmate.com.au [Aber Living, N.Z.](http://www.aber.co.nz) www.gasmate.co.nz

CONTENT LIST:

1x Height template card

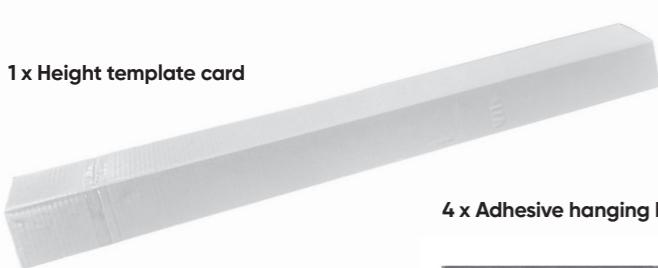

4 x Adhesive hanging blocks



8 x Self-tapping screws



4 x Adhesive bottom spacers




2 x End panels




ASSEMBLY INSTRUCTIONS:

1. **Position the template card:** place the height template card at the top corner of your BBQ end module, ensuring it aligns with the front of the module. Make sure the fold line of the card sits snugly against the benchtop, as this determines the height of the hanging blocks and the end panel.

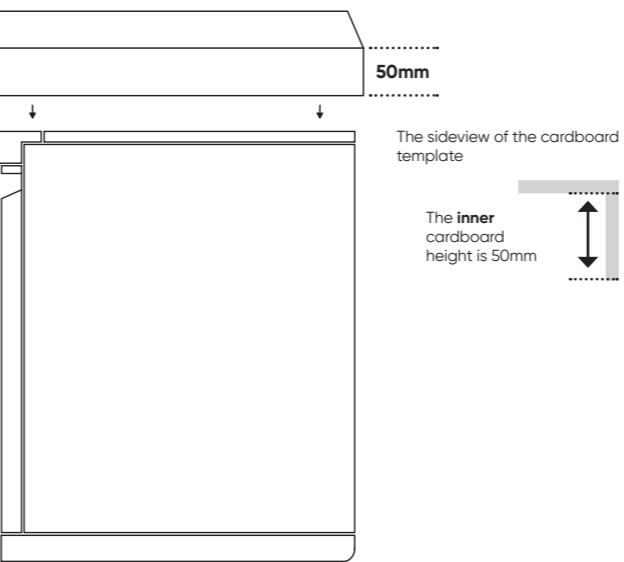

2. **Place the hanging blocks:** position the hanging blocks approximately 100mm and 500mm from the front of the module, as illustrated in the image.

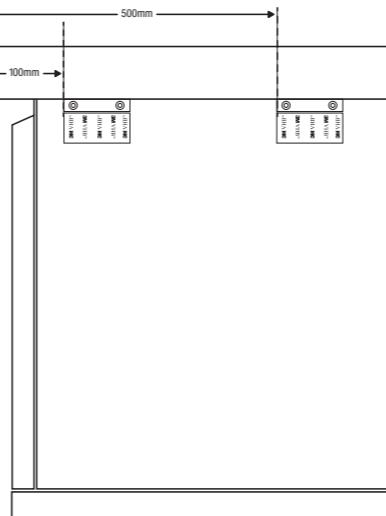

ASSEMBLY INSTRUCTIONS:

3. **Attach the hanging blocks:** Peel off the thin adhesive film (not the thicker tape) from the back of the hanging blocks. Press the blocks firmly into position and wait for 1-2 Hours then drive the provided self-tapping screws through the holes. Ensure the screw heads sit flush with the surface of the blocks.

Please note: On the Fridge modules, It is recommended to drill a 3 mm pilot hole before installing the self-tapping screws.



Thin adhesive tape

To be attached to the BBQ module.



Thick adhesive tape

To be attached to the end panel.

Please note: An extra adhesive strip is included with the end panels to allow for minor adjustments and to accommodate any small gaps during installation.

PLEASE NOTE:

Clean the areas where the hanging blocks and bottom spacers will be placed using methylated spirit.

4. **Install bottom spacers:** Attach the adhesive bottom spacers in the appropriate positions to support the lower edge of the end panel frame.



For fridge modules, cut the adhesive bottom spacer in half to create four pieces. Stack two pieces together at each position to achieve the correct spacing.

