
## **Casmate**

# NOVA MK2 CORNER MODULE

Model No. BQ3053

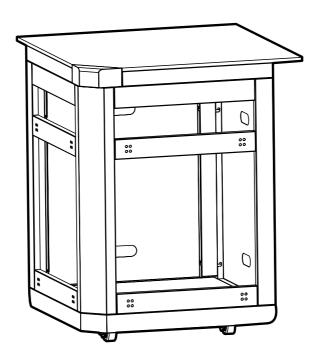

#### IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

Gasmate® is a registered trademark of Sitro Group Australia Pty Ltd www.gasmate.com.au Aber Living, N.Z. www.gasmate.co.nz

#### **SCREW PACK LIST**

Screw Packs	Image	Description	Quantity
Screw Pack - B1	Û	M6 x 15 Bolt	16
	0	M6 Spring Washers	16
	0	M6 Flat Washers	16
Screw Pack - B2	Ŧ	M5 Step Bolt	8
	Ĩ	M5 x 10 Bolt	53


#### **PARTS LIST**

Parts No.	Description	Quantity
1	Bottom panel	1
2	Casters	4
3	Front fascia	1
4	Vertical supports	3
5	Connecting beams - middle & bottom	4
6	Top supporting beams - Front	2
7	Top supporting beams - Back	2
8	Top module	1
9	Back covers	2


2

#### **ASSEMBLY STEPS SEQUENCE**


#### **CASTERS ASSEMBLY**

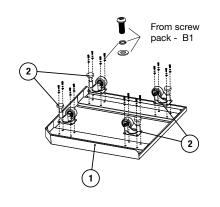

#### **INSTALL FRONT FASCIA**

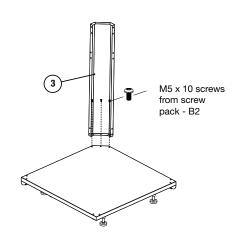

## VERTICAL SUPPORT ASSEMBLY

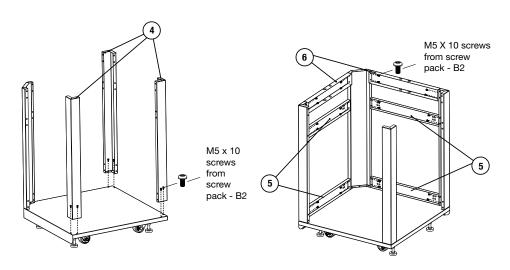


3


#### FRAMEWORK ASSEMBLY

#### FRAMEWORK ASSEMBLY


### TOP MODULE ASSEMBLY - PREPARATION

#### **BACK PANELS ASSEMBLY**

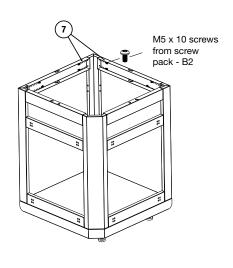

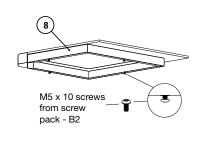


Partially install the M5x10 bolts into the Top Module assembly, leaving them loose for the following step.

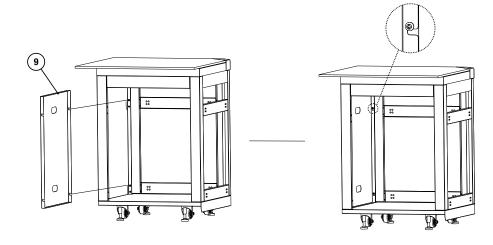


#### **TOP MODULE ASSEMBLY**

positions, then securely tighten them.

## BACK PANEL MOUNTING BOLTS ASSEMBLY

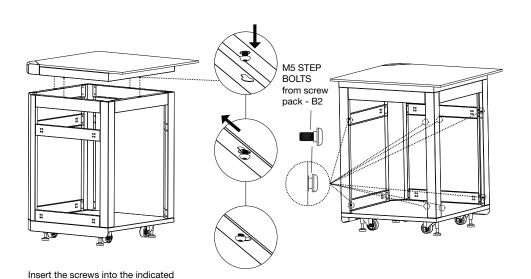

#### **CONNECTING THE CORNER MODULE TO OTHER MODULES**

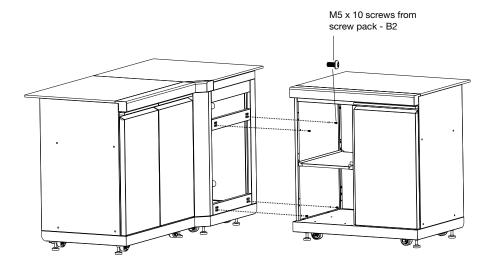

5

NOTES	NOTES

#### For any queries or assistance call



Customer Service (Australia Only)

1300 174 876

Hours of operation: Monday to Friday 8am - 5pm EST

