



Deluxe Pizza Oven Cabinet

Model No. PS110

- Designed for use with Gasmate Pizza Ovens, Model No. PO106 and Model No. PO110
- Convenient side shelves for extra bench space
- Side shelves drop down for easy storage
- Powder coated body with stainless steel top and shelves
- Convenient slide-out drawer
- Cabinet features cavity for cylinder storage
- Locking castors



Gasmate® is a registered trademark of: Sitro Group Australia Pty Ltd www.gasmate.com.au
Aber Ltd - Hamilton, N.Z. www.gasmate.co.nz

Important: Retain these instructions for future use.

ASSEMBLY INSTRUCTIONS


Tools Needed for Assembly

- Phillips screwdriver
- Adjustable wrench

Note: Remove any transit protection material


STEP 1

Attach the castors to the base panel.

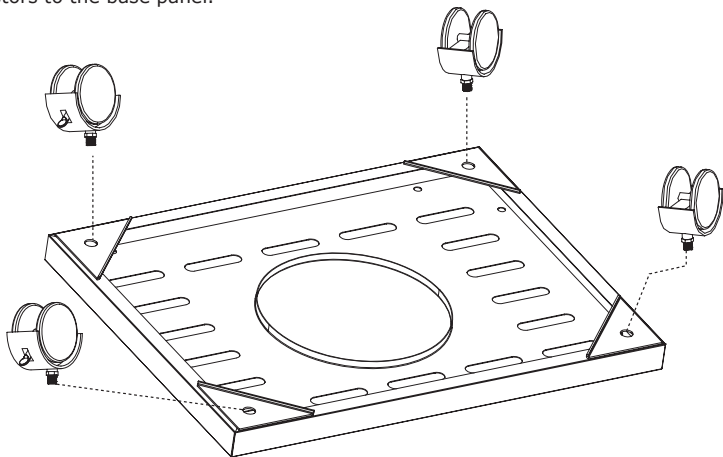


STEP 2

Attach the LH side panel to the base using two washers and two M6 screws.

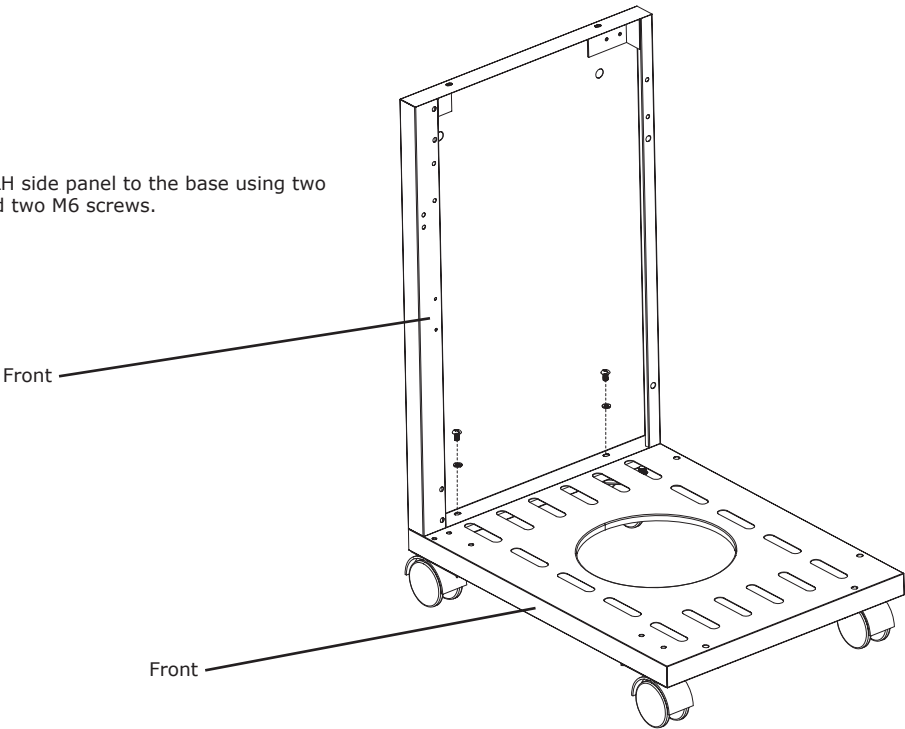


STEP 3

Attach the RH side panel to the base panel using two washers and two M6 screws.

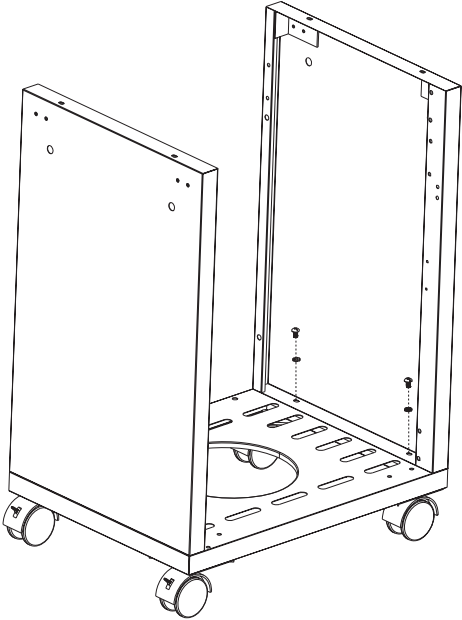


STEP 4

Attach the back panel to the LH side, RH side and base panel using six washers and six M6 screws.

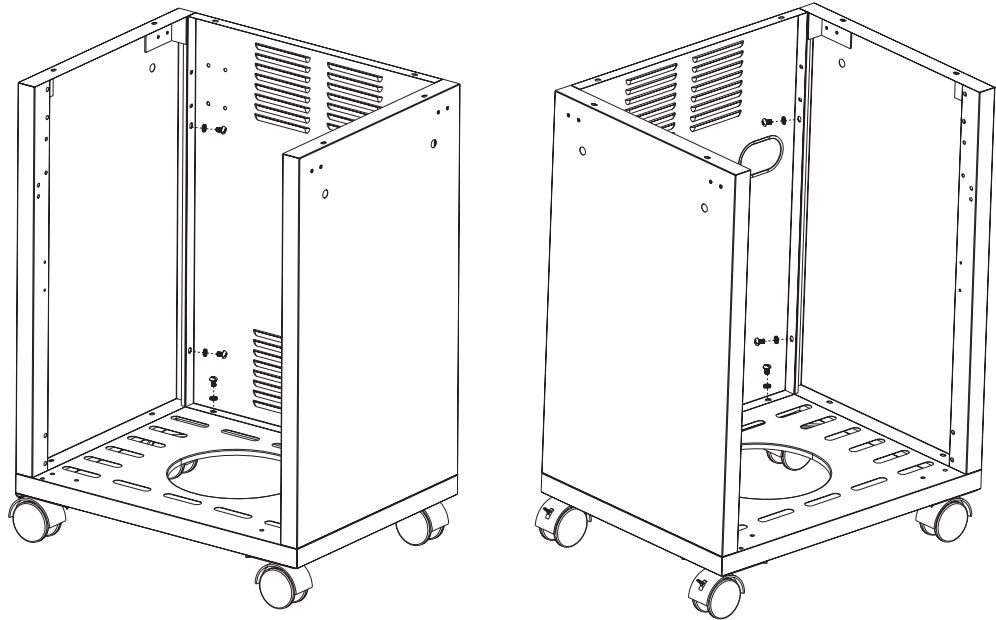



STEP 5

Attach the top panel using six washers and six M6 screws.

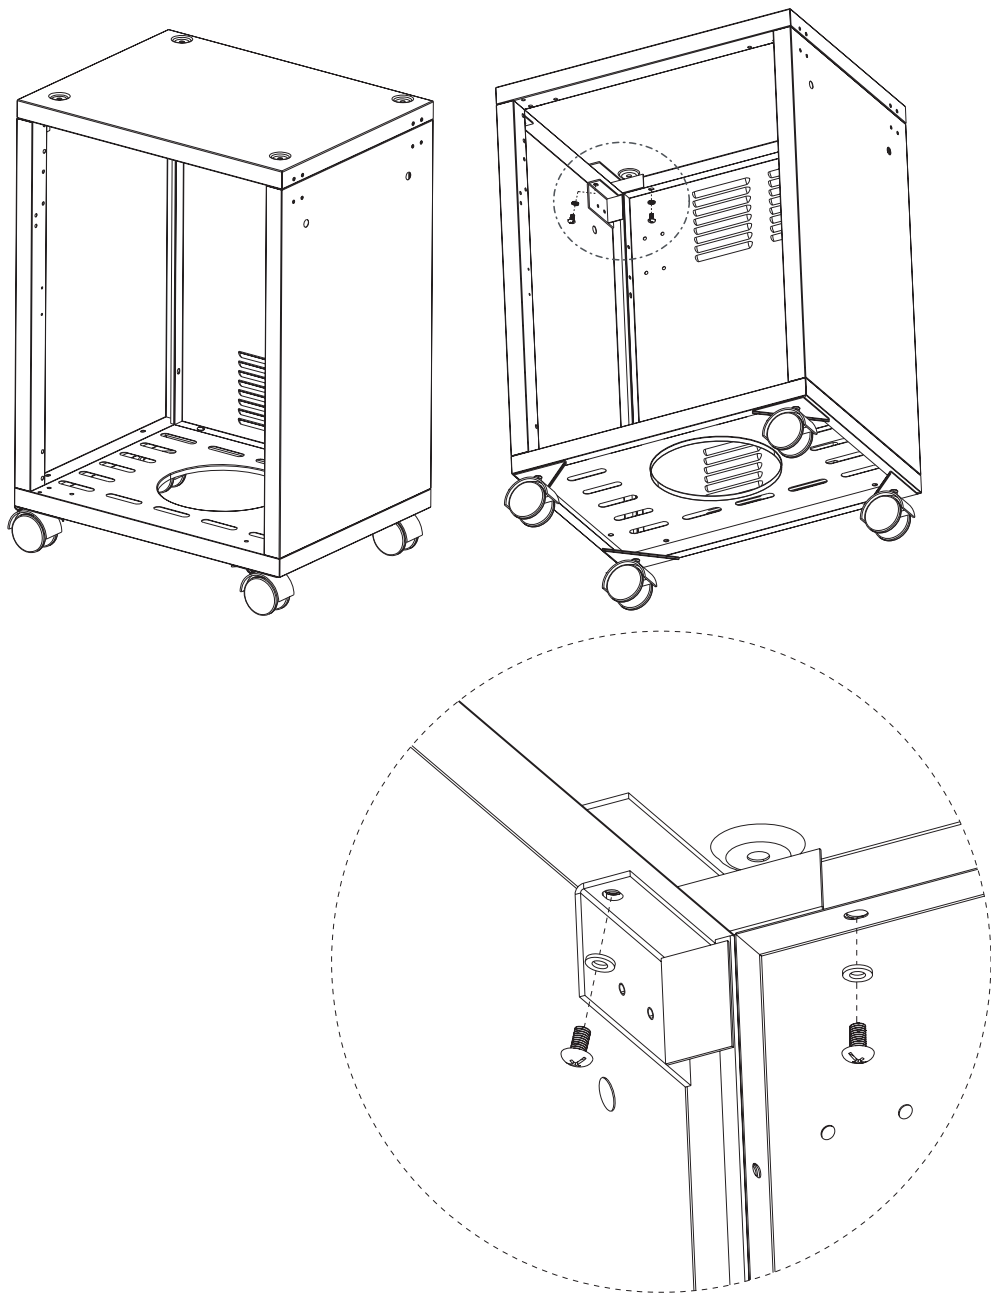


STEP 6

Attach the four strengthening brackets to the cabinet using sixteen M5 screws.

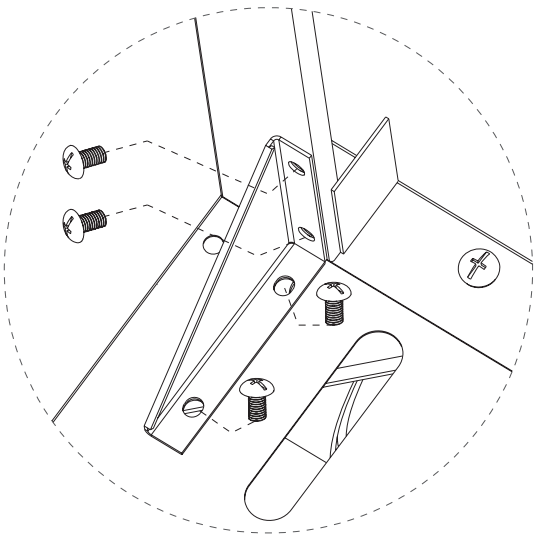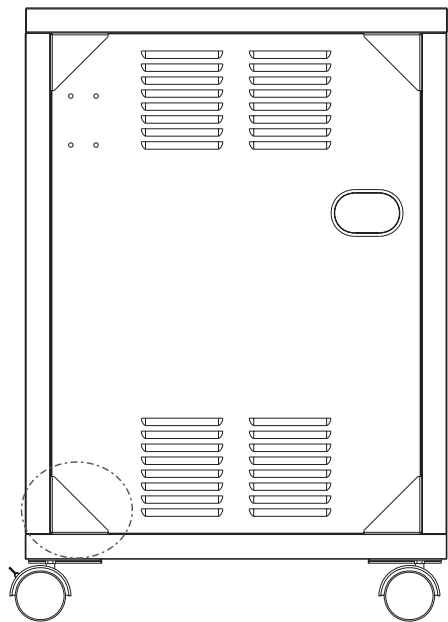


STEP 7

Attach the two drawer rail brackets to the side panels using eight M4 screws.

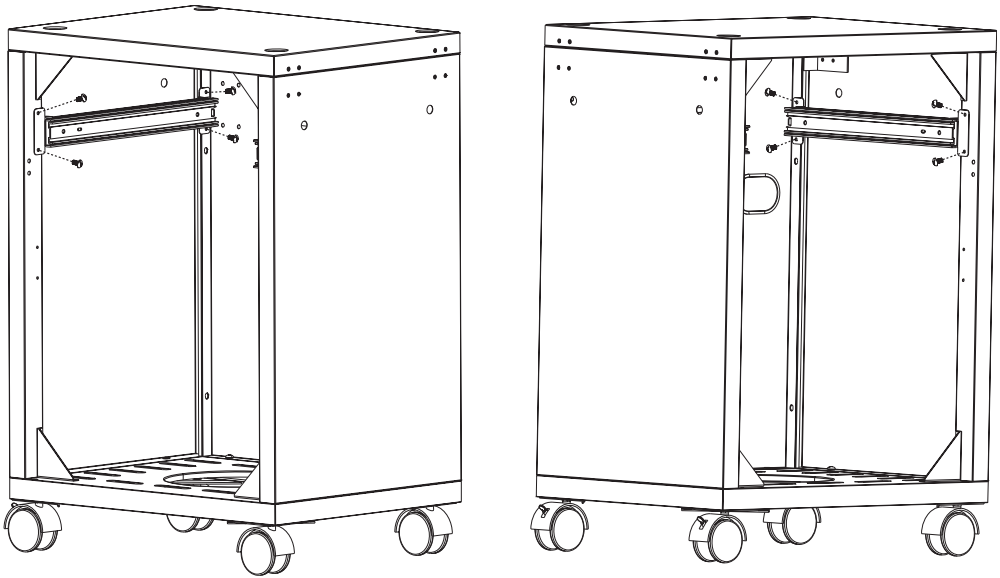


STEP 8

Attach the front beam to the side panels using four M4 screws (the hole side will face the bottom).

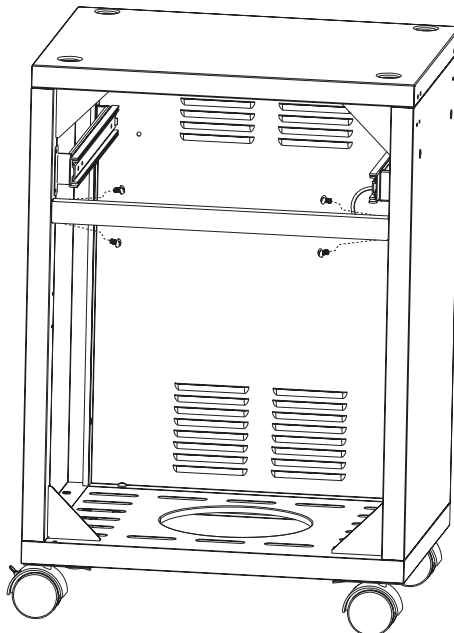


STEP 9

Attach the spring hinge pin to the door and attach the door handle using two M4 screws.

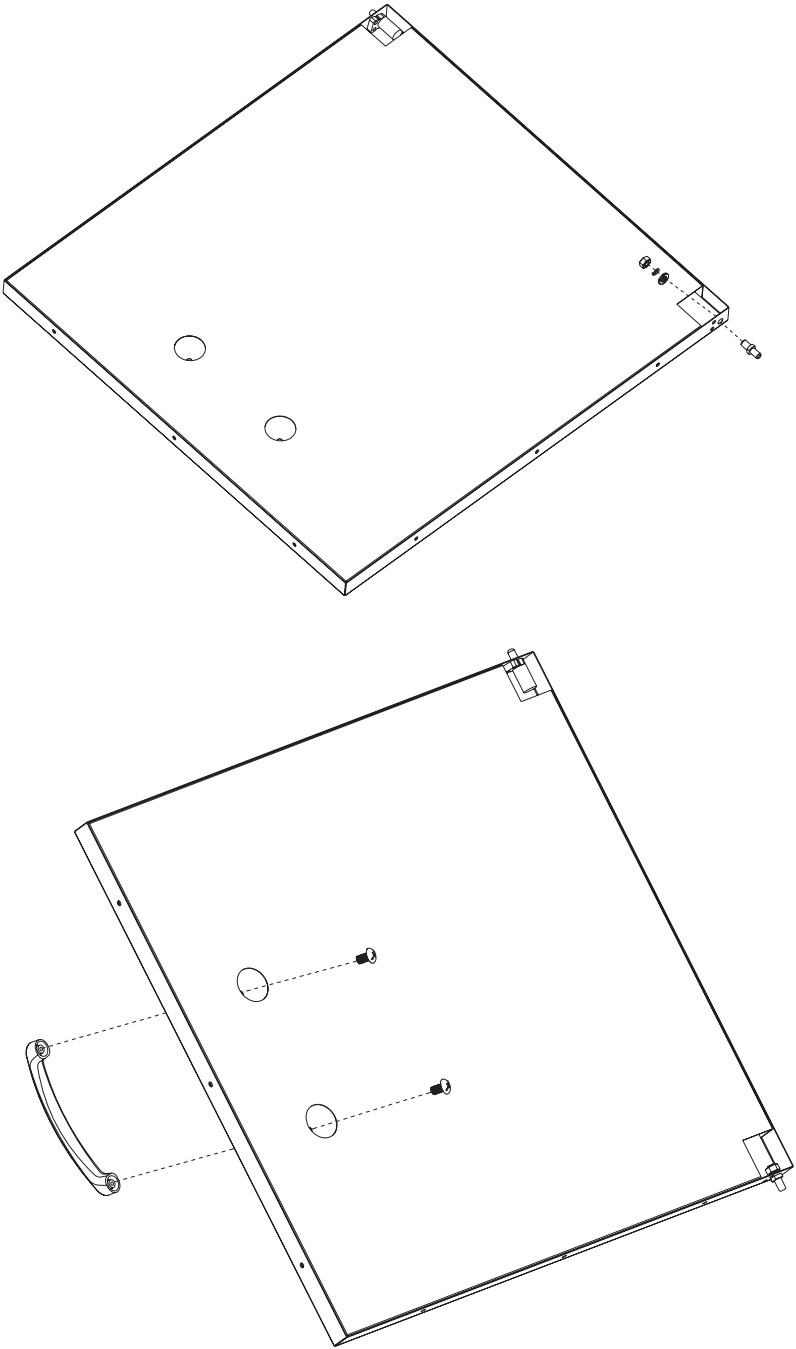


STEP 10

Attach the door to the cabinet with the spring hinge pin at the top and the solid pin at the bottom.

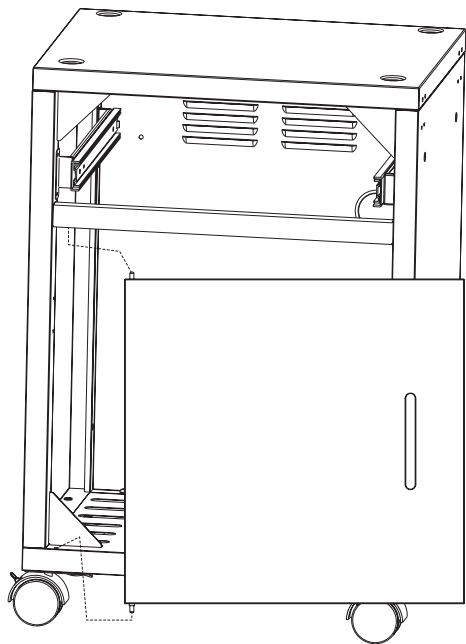


STEP 11

Attach the drawer handle to the drawer using two M4 screws.

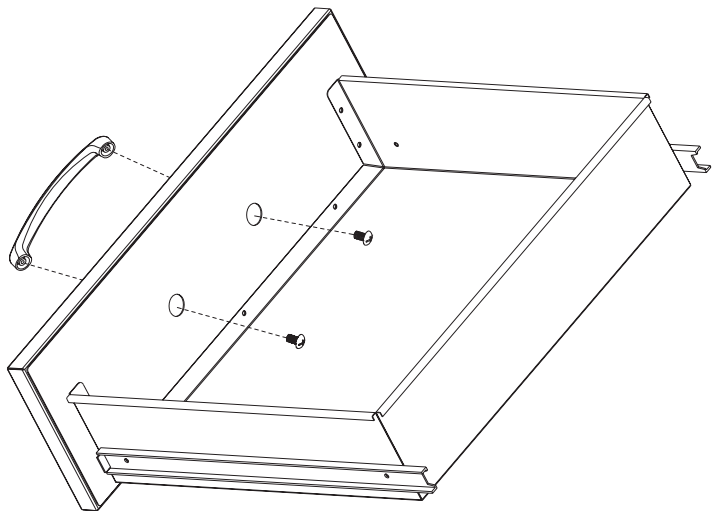


STEP 12

Slide the drawer assembly into the cabinet.

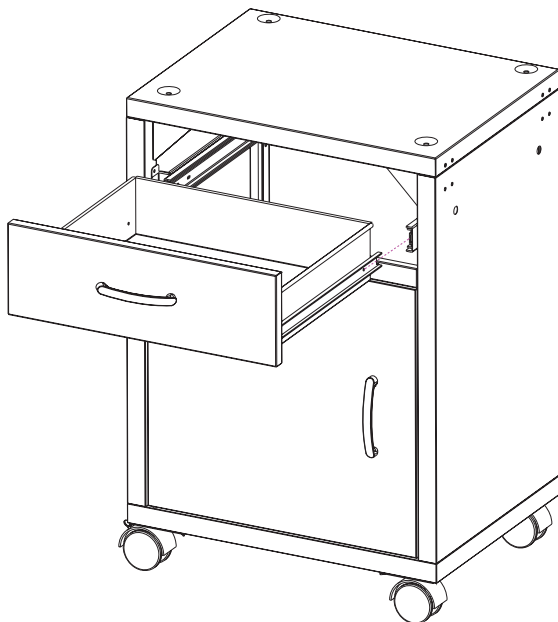



STEP 13

Attach the side shelf brackets to the cabinet using sixteen M5 screws.

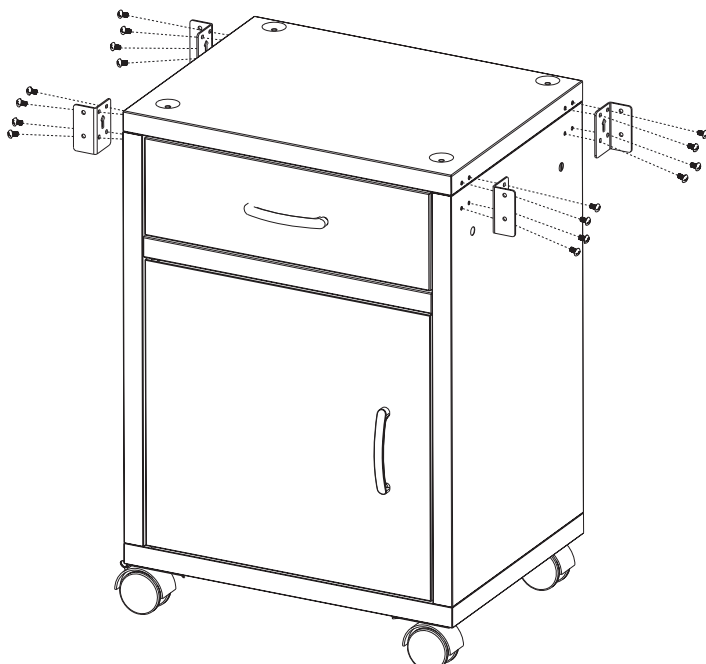



STEP 14



Attach four M6 screws and nuts to the upper holes of the side shelf brackets.

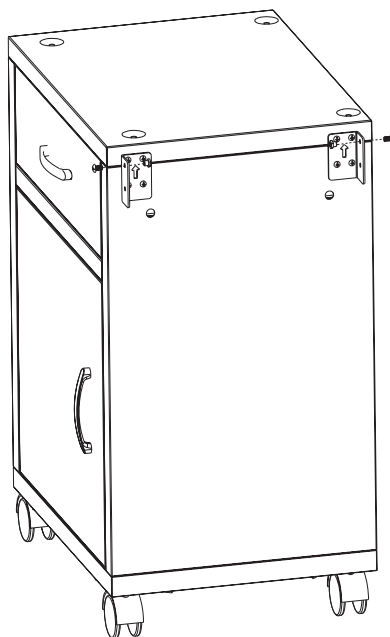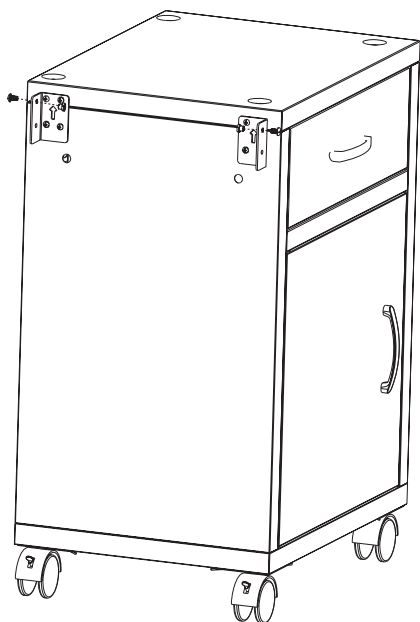

STEP 15

Attach the side shelves to the bracket using four M6 screws and nuts.

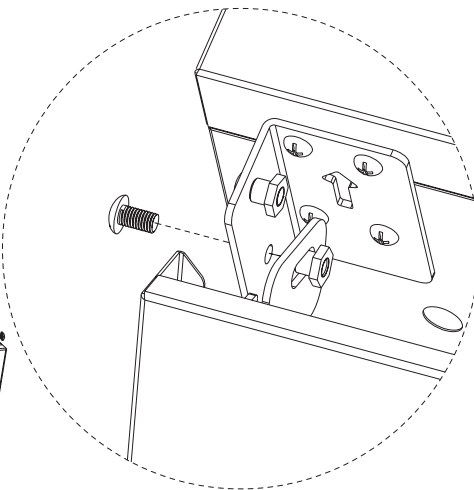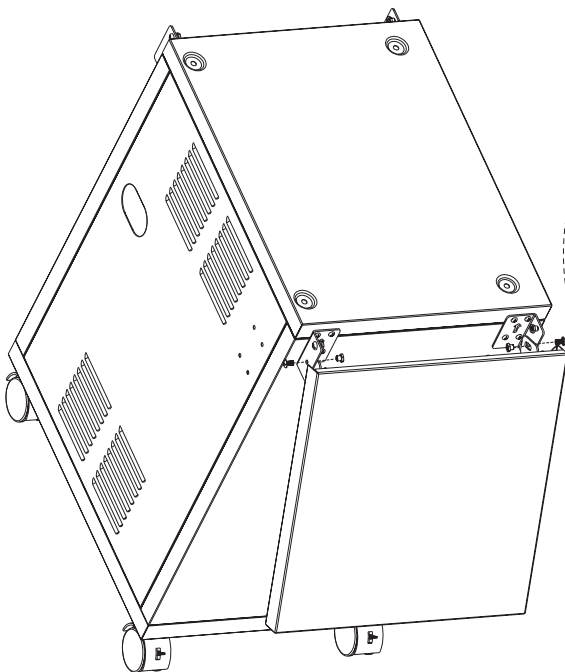

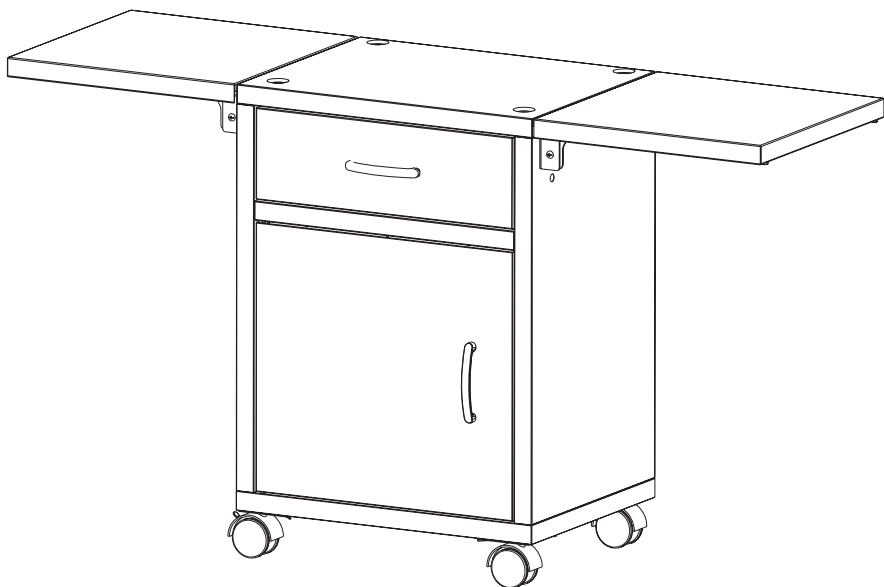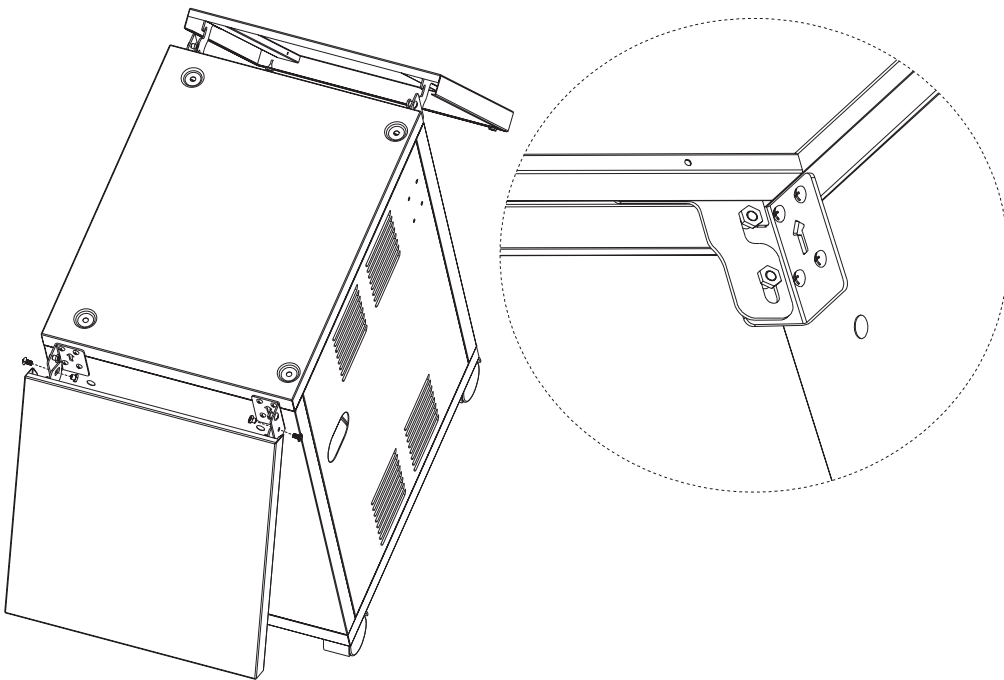

For any queries or assistance call



Customer Service
(Australia Only)

1300 174 876

Hours of operation:
Monday to Friday 8.30am - 5.30pm EST

Do not return to place of purchase.

Contact 1300 174 876

Your purchase receipt will be required for warranty claims.

Gasmate®